


MN01-LTE-M-PX

Cellular Communicator
Ouick Installation Manual

Wiring the Communicator to the Paradox Alarm Panel via Keybus*

Red (+): \leftrightarrow 12-15V DC Power Supply

 Black (-): \leftrightarrow Ground Yellow (Y): \leftrightarrow YEL Green (G): \leftrightarrow GRN



- * Panel compatibility list for Keybus integration is available at support.m2mservices.com
- ✓ **WARNING:** The wiring should be done only when the panel and the communicator are disconnected from the powerline!
- ✓ Connect the antenna and place it outside of the alarm panel's box.
- ✓ Connect + and of the communicator to a max of 12V 15V DC power supply.
- ✓ WARNING: THE USB PORT TO BE USED WITH M2M ADD-ON MODULES ONLY.

LED Indicator

- ✓ Slow flashing trying to establish connection
- ✓ Constantly On connection established at good signal level
- ✓ Constantly On, blinking every 5 sec. connection established at low signal level
- ✓ Fast flashing transferring data.

doc. nr. 06052, ver.1, Feb-2025



Device Registration in the M2M Dealer Portal

Register your company at www.m2mdealers.com or use your existing account to login.

Adding preferred monitoring station

Contact your monitoring station and request your M2M Dealer Code.

- Specify your preferred monitoring station during your initial registration in section Additional Information > Preferred Monitoring Station list. Provide your Dealer code in the corresponding field, OR
- Add preferred monitoring station/s after registration from

My Devices > Monitoring Stations > Add Reporting Channel

Add a new device and choose cellular service monthly billing method:

Use the device Serial Number and the Config Key provided with this manual.

- Go to My Devices > Devices > Add New Device.
- Select monitoring station (optional)
- Select preferred cellular service monthly billing method.
- From Monitoring Station You will be billed for cellular service by the monitoring station.
- From M2M Services You will be billed for cellular service by M2M Services.



RControl App (end user) Credentials

MN01-LTE-M-PX

Cellular Communicator **Ouick Installation Manual**









Download the RControl mobile application on your Android or iOS device by scanning the QR codes.

Remote Arming/Disarming via Keybus for Paradox Alarm Panels

Panel compatibility list for Keybus integration is available at support.m2mservices.com

- ✓ Wire the device to the panel according to the Keybus wiring diagram.
- √ To perform Sync with Panel, log in to the RControl App, go to Settings > Remote Arming/ **Disarming**, press **Sync with Panel**, and follow the instructions in the app:
 - Via the Enter Installer Code option: By entering the installer code in the RControl mobile app, or
 - Via the Use Keypad* option: By entering the installer code on the panel keypad.
 - * Depending on the keypad model, there are two options for entering the installer code:
 - For MG/SP alarm panels used with K32LCD+, K32+, PA6, K35, K636, K10V, K10H keypads: Press the Power button U of the keypad followed by the installer code.
 - For MG/SP alarm panels used with TM70, TM50 keypads, you can perform Sync with Panel: From the main menu of the keypad, click the Menu button > System Setup, and enter the installer code.
- ✓ Perform **Sync with Panel** every time the panel programming has been changed.
- (i) Unless prompted in the app, **DO NOT** operate the keypad during the sync process. doc. nr. 06052, ver. 1, Feb-2025



Device Registration in the M2M Dealer Portal

IMPORTANT NOTE:

Do not power the device before registering it in the M2M Dealers Portal because the cellular service will be deactivated.

Serial Number and Config Key: